

9947T Riding Mower Deck Washer Instructions

1. Park riding mower on a short, newly cut lawn, driveway or other flat surface.
2. Turn off mower engine.
3. Set brakes on lawn mower.
4. Raise mower deck to its highest setting.
5. Attach the Riding Mower Deck Washer to a garden hose. From the right side or discharge side of the mower, slide the washer under the mower deck until the threaded coupling aligns approximately with the outer edge of the mower deck or until the washer is centered under the mower deck.
6. Turn water hose pressure on full.
7. Start mower engine and engage blades. While sitting on the mower, run raised mower blades at high speed for a few minutes, or until the grass clippings are washed away from the underside of the mower deck.
8. After cleaning the mower deck, disengage the mower blades and shut off the mower engine. Turn off water and removed the Riding Mower Deck Washer from under the mower.